



MARQUE: SKULLCANDY
REFERENCE: HESH 3 BLACK
CODiC: 4374088



NOTICE






**QUICK
START
GUIDE**

HESH[®] 3

PAIR NEW DEVICE:

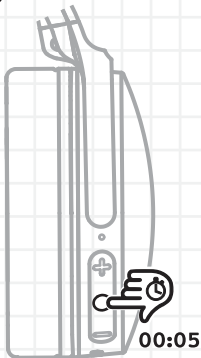

*OFF MODE

1

PAIR NEW DEVICE*Off mode

COUPLER NOUVEL APPAREIL*Mode off

VINCULAR NUEVO DISPOSITIVO*Modo apagado

ACCOPPIA NUOVO DISPOSITIVO*Modalità spento

EMPARELHAR NOVO DISPOSITIVO*Modo desligado

MIT NEUEM GERÄT KOPPELN*Ausgeschalteter Zustand

NIEUW APPARAAT PAREN*uitmodus

PARDAN NY ENHED*Slukket tilstand

MUODOSTA UUSI LAITEPARI*Off-tila

SAMMENKOBLE NY ENHET*Av-modus

PARA NY ENHET*Av-läge

СОПРЯЖЕНИЕ НОВОГО УСТРОЙСТВА*В выключенном режиме

配对新设备 *关机模式


新しいデバイスをペアリング *オフモード

'새 기기 짝맞추기 *끄기 모드

وضع إيقاف مزوجة جهاز جديد

2

PAIRING MODE :

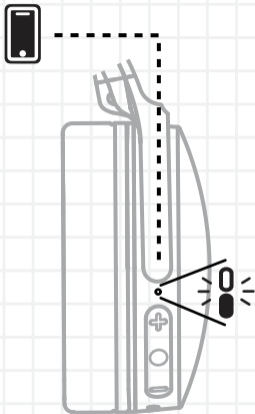

"HESH 3"

3

PAIRING MODE

MODE COUPLAGE

MODO DE VINCULACIÓN

MODALITÀ DI ACCOPPIAMENTO

MODO EMPARELHAMENTO

KOPPELMODUS

PAARMODUS

PARDANNELSEvSTILSTAND

LAITEPARIN MUODOSTUSTILA

SAMMENKOBLINGSMODUS

PARNINGSLÄGE

РЕЖИМ СОПРЯЖЕНИЯ

配对模式


ペアリングモード

페어링 모드

وضع المزوجة

4

POWER-ON/OFF :

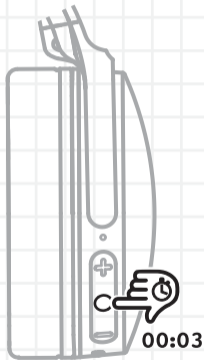

POWER-ON/OFF

ON/OFF

ENCENDIDO/APAGADO

ACCENSIONE/SPEGNIMENTO

LIGAR/DESLIGAR

EIN/AUS

AAN-/UITZETTING

TÆND/SLUK FOR STRØM

VIRTA PÄÄLLE/POIS

STRØM AV/PÅ

STRÖM AV/PÅ

ВКЛЮЧИТЬ/ВЫКЛЮЧИТЬ ПИТАНИЕ


开机/关机

電源 - ON/OFF

전원 켜기/끄기

لتشغيل/لإيقاف التشغيل

VOLUME UP :

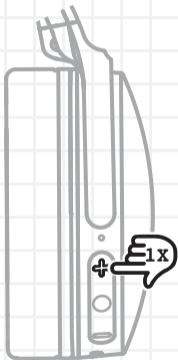

VOLUME UP

VOLUME +

SUBIR VOLUMEN

AUMENTO VOLUME

AUMENTAR O VOLUME

LAUTSTÄRKE ERHÖHEN

VOLUME OMHOOG

SKRU OP FOR LYDSTYRKEN

ÄÄNENVOIMAKKUUDEN LISÄYS

VOLUM OPP

ÖKA VOLYMEN

УВЕЛИЧЕНИЕ ГРОМКОСТИ


音量増大

音量を上げる

볼륨 높이기

رفع مستوى الصوت

VOLUME DOWN:

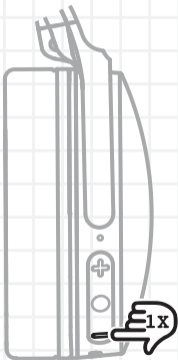

VOLUME DOWN

VOLUME -

BAJAR VOLUMEN

RIDUZIONE VOLUME

DIMINUIR O VOLUME

LAUTSTÄRKE SENKEN

VOLUME OMLAAG

SKRU NED FOR LYDSTYRKEN

ÄÄNENVOIMAKKUUDEN VÄHENNYS

VOLUM NED

SÄNKÄ VOLYMEN

УМЕНЬШЕНИЕ ГРОМКОСТИ


音量减小

音量を下げる

볼륨 낮추기

خفض مستوى الصوت

PLAY / PAUSE

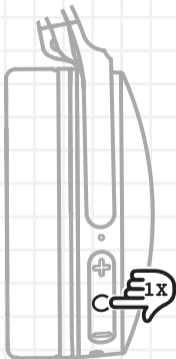

PLAY / PAUSE

LECTURE / PAUSE

REPRODUCIR / PAUSAR

RIPRODUCI / PAUSA

REPRODUZIR / COLOCAR EM PAUSA

WIEDERGABE / PAUSE

AFSPELEN / PAUZEREN

AFSPIL / PAUSE

TOISTO / TAUKO

SPILL / PAUSE

SPELA UPP / PAUSA

ВОСПРОИЗВЕДЕНИЕ / ПАУЗА


播放 / 暫停

再生 / 一時停止

재생 / 일시 정지

تشغيل / إيقاف مؤقت

TRACK FORWARD :

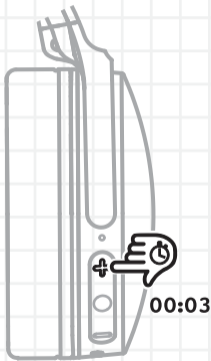

TRACK FORWARD

PISTE SUIVANTE

ADELANTAR

BRANO SUCCESIVO

FAIXA SEGUINTE

NÄCHSTER TITEL

VOLGEND NUMMER

SKIFT TIL NÆSTE MUSIKNUMMER

KELAUS ETEENPÄIN

NESTE SPOR

NÄSTA LJUDSPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК ВПЕРЕД


下一曲目

次のトラックを再生する

다음 트랙으로

مسار إلى الأمام

TRACK BACK :

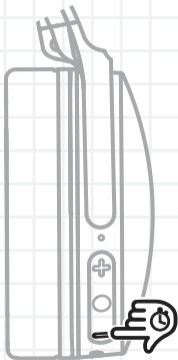

00:03

TRACK BACK

PISTE PRÉCÉDENTE

RETROCEDER

BRANO PRECEDENTE

FAIXA ANTERIOR

VORANGEHENDER TITEL

VORIG NUMMER

MUSIKNUMMER TILBAGE

KELAUS TAAKSEPÄIN

FORRIGE SPOR

BYTA TILL FÖREGÅENDE SPÅR

ПЕРЕКЛЮЧЕНИЕ НА 1 ТРЕК НАЗАД


上一曲目

前のトラックを再生する

이전 트랙으로

مسار إلى الخلف

ANSWER/END :

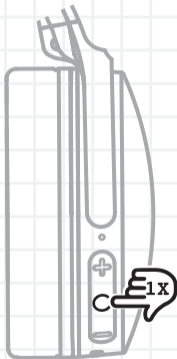

ANSWER/END

RÉPONDRE/FIN

RESPONDER/COLGAR

RISPOSTA/FINE

ATENDER/DESLIGAR

ANNEHMEN/BEENDEN

BEANTWOORDEN/BEËINDIGEN

BESVAR/AFSLUT

VASTAUS/LOPETUS

SVAR/AVSLUTT

SVARA/LÄGG PÅ

ОТВЕТИТЬ/ЗАКОНЧИТЬ


接听/結束

応答 / 終了

전화 받기/끊기

رد الإتهام

CHARGE :

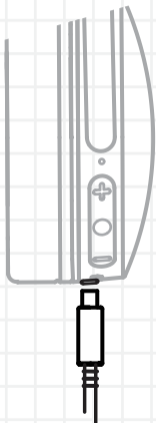

21

CHARGE

CHARGE

CARGAR

CARICA

CARREGAR

AUFLADEN

OPLADEN

OPLAD

LATAUS

LADING

LADDA

ЗАРЯДКА

充电

充電

충전

22